

Using the Digidoor III ac / dc Onboard Receiver

Digi e-Key

The Digi e-key receiver is incorporated into the Digidoor III ac / dc control board.

Each Digi e-key transmitter has a unique identity which, together with the hopping code, must be recorded by the onboard receiver before the system will function.

Recording a new transmitter via the Wall Console

1. With power on, if need be, turn the light off using the light toggle button.
2. Press and hold the light toggle button. The light will come on and after 5 seconds go off.
3. Release the button and the light will come on again.
4. Within 30 seconds, press the required button on the Digi-e key transmitter. The light on the digidoor III ac / dc will go off.
5. To confirm, press the same button on the transmitter again and the light on the Digidoor III ac / dc will flash four times. The transmitter is ready for use. Repeat the above for additional transmitters. If the memory limit of 28 transmitters is reached, the control board will beep for 4 seconds to indicate full and return to normal operation.